




HEXA COLLECTION

INSTALLATION TYPE:
(OUTDOOR WALL LIGHTING)

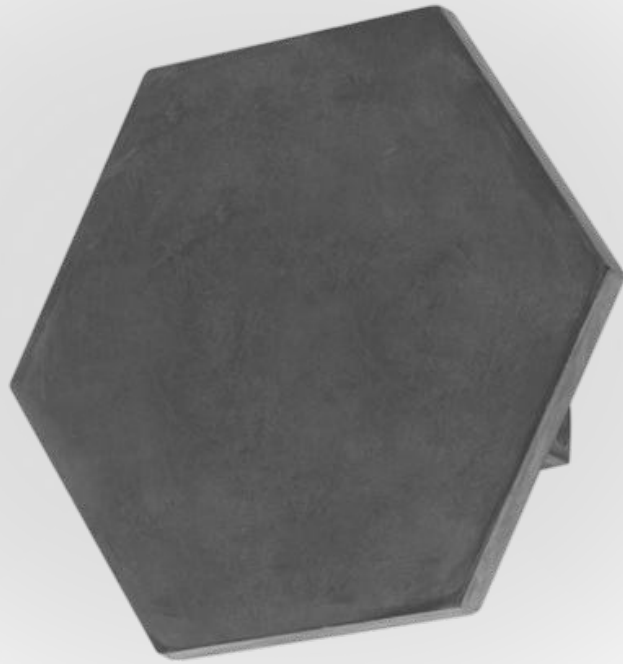

HEXA WING Q WING Q BIG WING X

DEFINE

HEXA BIG

Installation must be performed only by qualified personnel.

NO

✓

NO

Please follow strictly the instructions concerning the installation.

The driver must be remotely installed and must be easily accessible.

The manufacturer is not liable for damages caused by wrong installation or wrong utilization or due to unauthorized modifications on the item.

In the event that the manufacturer accept the return of the article to verify it's operation the article must not be disassembled.

ELECTRICAL CONNECTION

⚡

All technical data are written on the technical label.

Please refer to the driver data sheet before starting the electrical connections.

Do not change polarity (+ red wire / - black wire) to avoid damages LED.

Connection terminal not included.

IP code of the connection must be equal or higher than the article's.

Do not stress the cables by pulling. The cable can be substituted only by the manufacturer.

If more than one product are involved , the connection must be in PARALLEL.

L

V a.c.

N

CONSTANT VOLTAGE 24V

+

-

+

-

+

-

+

-





	x2 A		x2 B		x1 C		x2 D	
						x1	E	
						x1	F	

sales@gordonbullard.com
www.byiba.com
 1 877-964-4646

991 South Gull Lake Dr.
 Richland, MI 49083
 USA

Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.

© Bullard & Comany 2026 All Rights Reserved

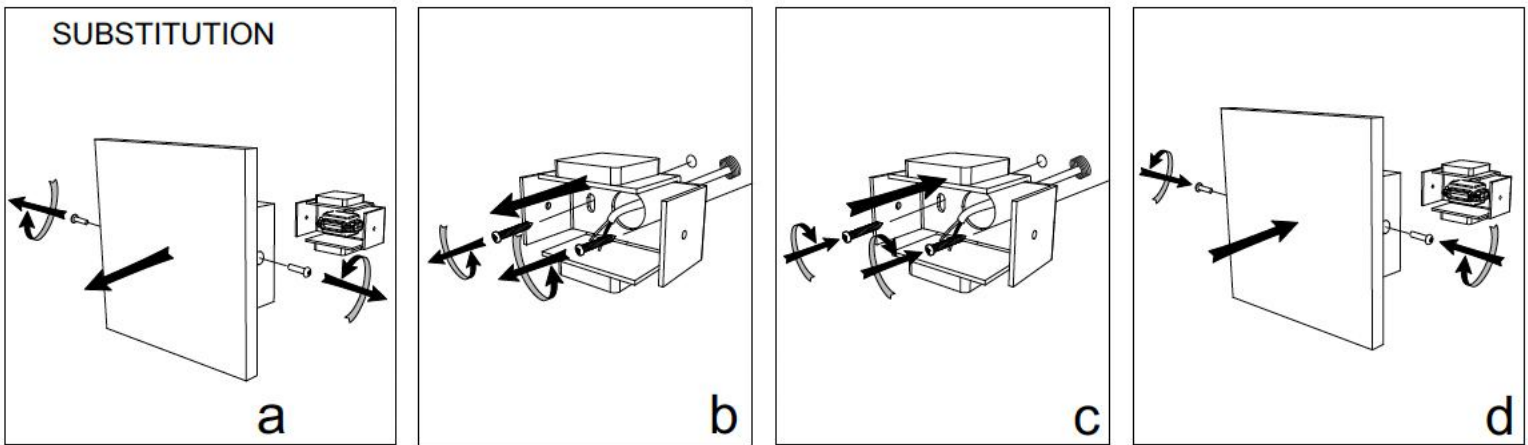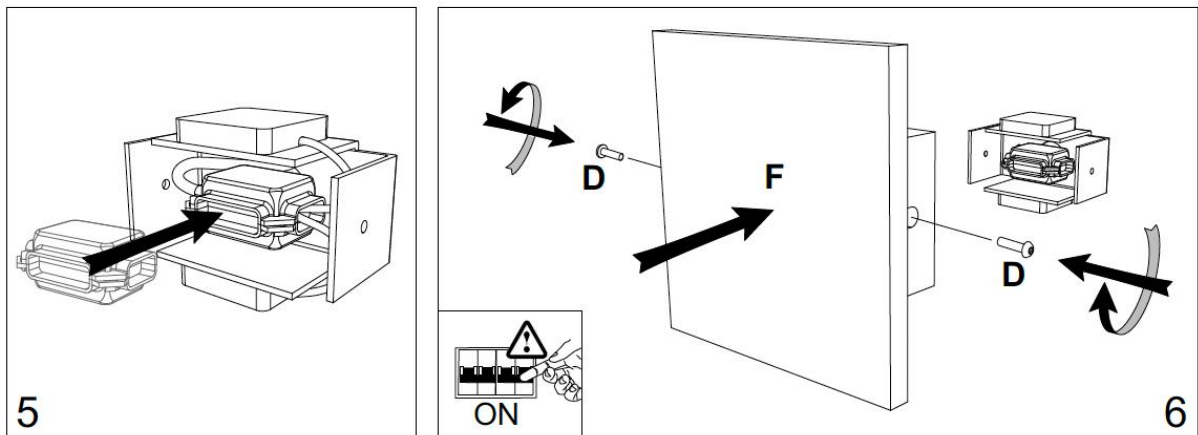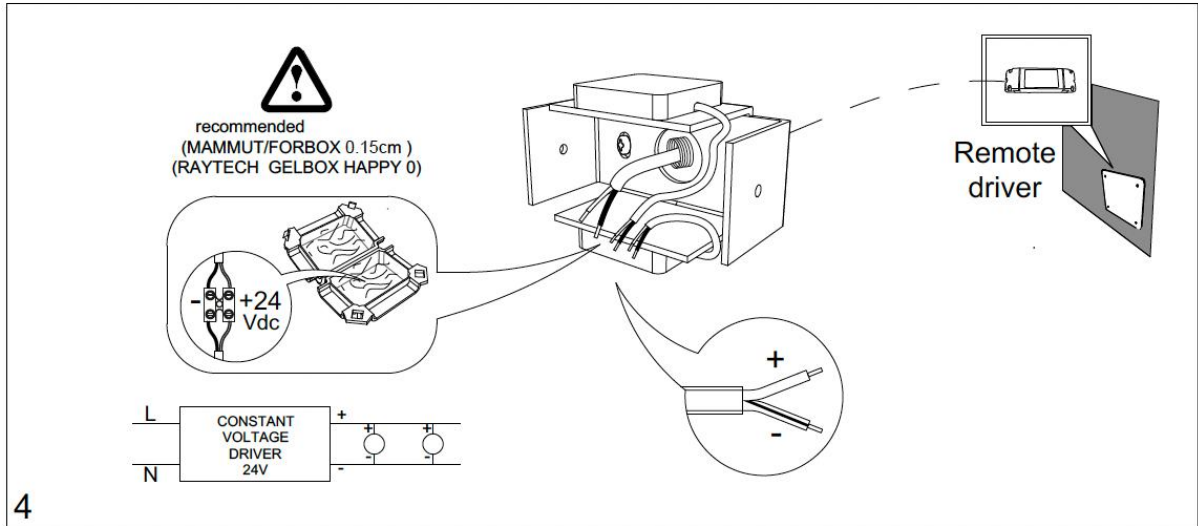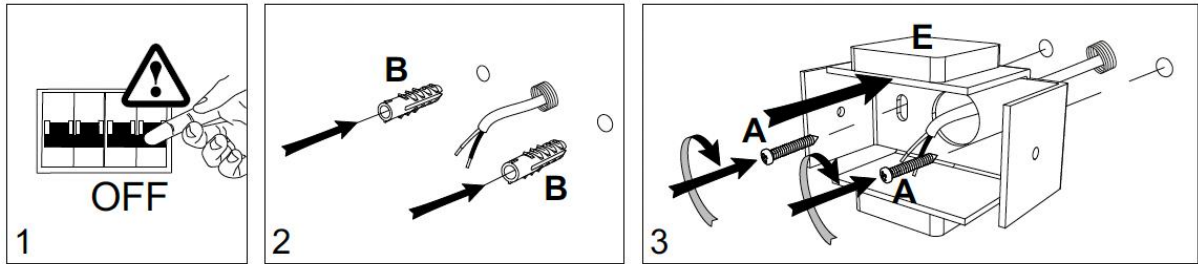

sales@gordonbullard.com
www.byiba.com
 1 877-964-4646



991 South Gull Lake Dr.
 Richland, MI 49083
 USA



IMPORTANT

To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.

- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, follow the correct colour code for power cables: (N) blue, (L) brown or black and, only for class I equipment, (T) yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightly, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.



= The equipment at the end of its life must be collected separately from other waste.

sales@gordonbullard.com

www.byiba.com

1 877-964-4646



991 South Gull Lake Dr.

Richland, MI 49083

USA