BYIBA
LIGHT

INSTALLATION INSTRUCTION




LOUVER

INSTALLATION TYPE:
(ACOUSTIC COLLECTION)

UPDATED: 11/09/2026

BYIBA
LIGHT


Installation Diagram

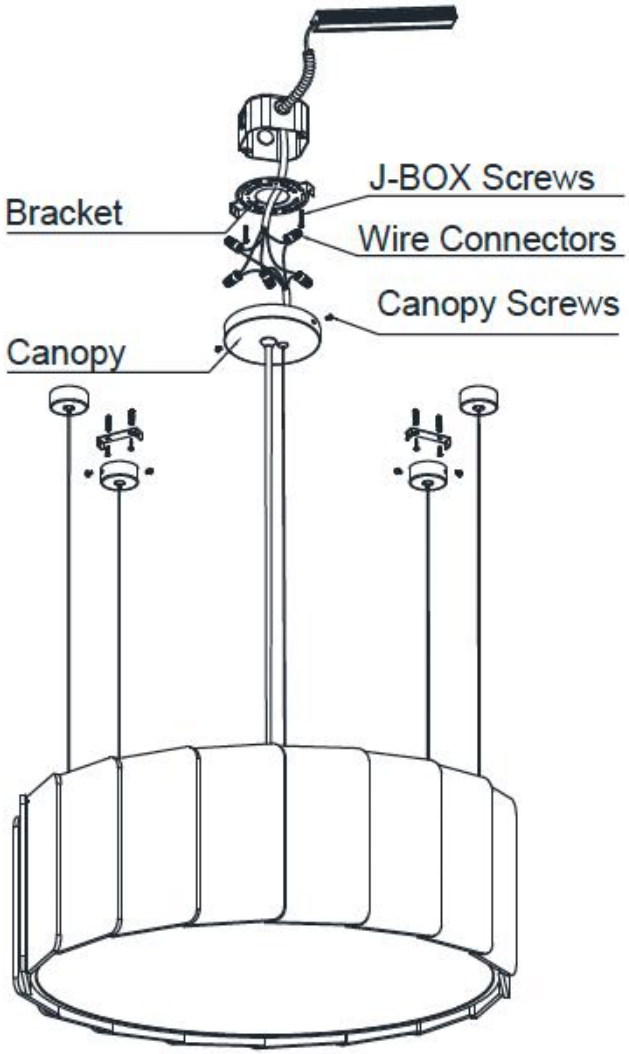


Step 1

Shut "OFF" the electricity at main fuse box.

Place the wall switch in the "OFF" position of the room you are installing the fixture.

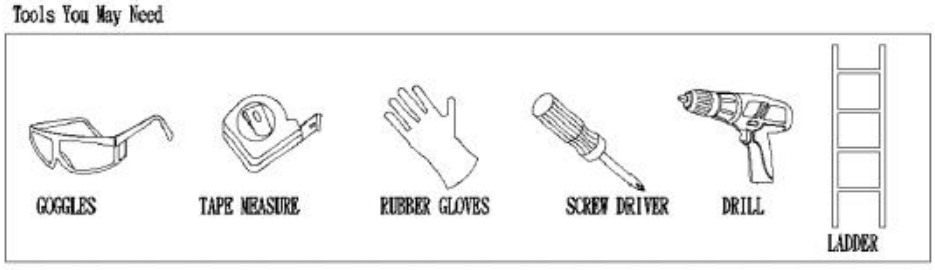

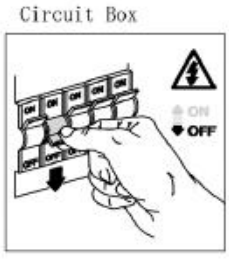

Step2


Make point marks on the ceiling according to the Mounting pin and Canopy location.

sales@gordonbullard.com
www.byiba.com
1 877-964-4646

991 South Gull Lake Dr.
Richland, MI 49083
USA


Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.

© Bullard & Comany 2026 All Rights Reserved

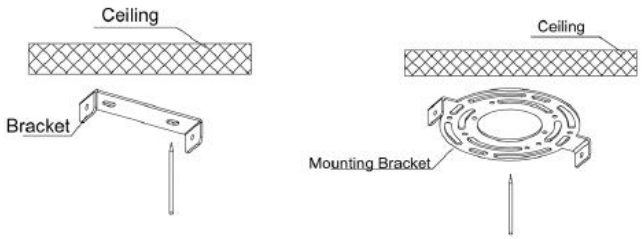

Step3


Take out Plastic Pin， drill diameter **8mm** holes (Except Canopy position)on the ceiling according to the location mark as step1.Insert the expansion bolts into the holes. Then use Self-Tapping screw to fix Mounting Pin with ceiling.

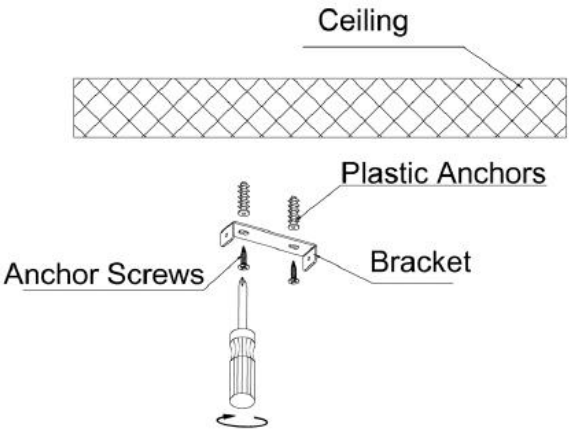

Step 4

Use 2 pcs J-BOX Screws to fix Mounting Bracket with J-Box.

NOTE:J-BOX used by Garvin 54171-S or equivalent Provided by others

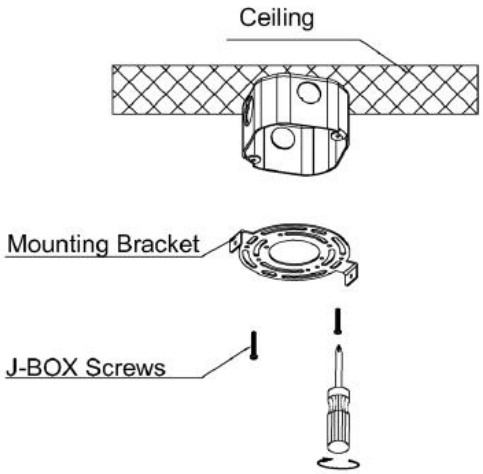

Attention: Must secure mounting plate at all connection points (junction box plus four outer points for small and medium size, or six outer points for large size) to support fixture weight appropriately. Not using all mounting points could damage the fixture and void product warranty.

Step 5


sales@gordonbullard.com
www.byiba.com
1 877-964-4646

991 South Gull Lake Dr.
Richland, MI 49083
USA

Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.


© Bullard & Comany 2026 All Rights Reserved

Use wire connectors to connect L,N,G,DIM+,DIM- wires. After finish, Put all Wires with connector into J-Box.

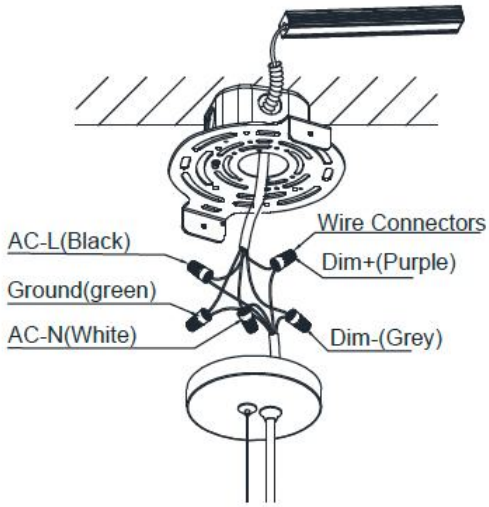


Step 6

Keep the Slot hole as vertical line with Side screw, put the lamp body upward. And make screw into slot, rotate Canopy and make Mounting Bracket and Canopy fixed.

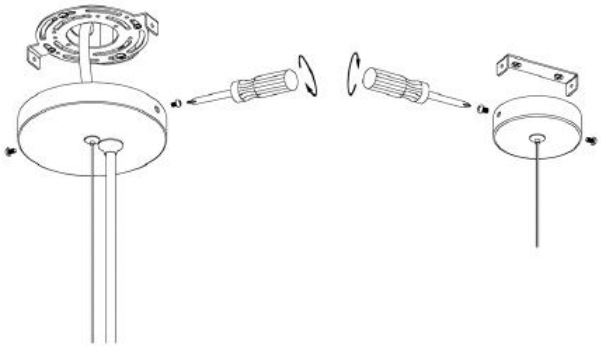

Step 7

Adjust the fixture safety cable and Aircraft cable length, use Screw to fix with Mounting Bracket and Mounting Canopy. Then loosen all the cables.

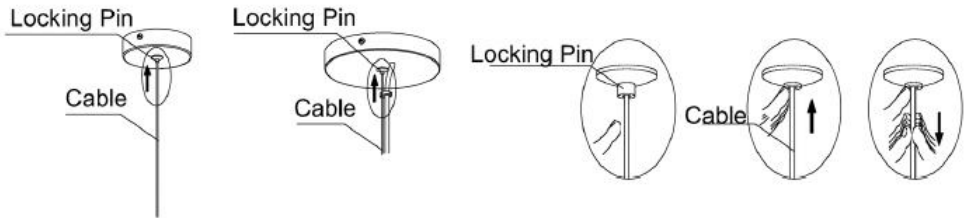

Step 8

After finish installation, turn on the electricity at main fuse box, the lighting works.


sales@gordonbullard.com
www.byiba.com
1 877-964-4646

991 South Gull Lake Dr.
Richland, MI 49083
USA


Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.

© Bullard & Comany 2026 All Rights Reserved

BYIBA
LIGHT

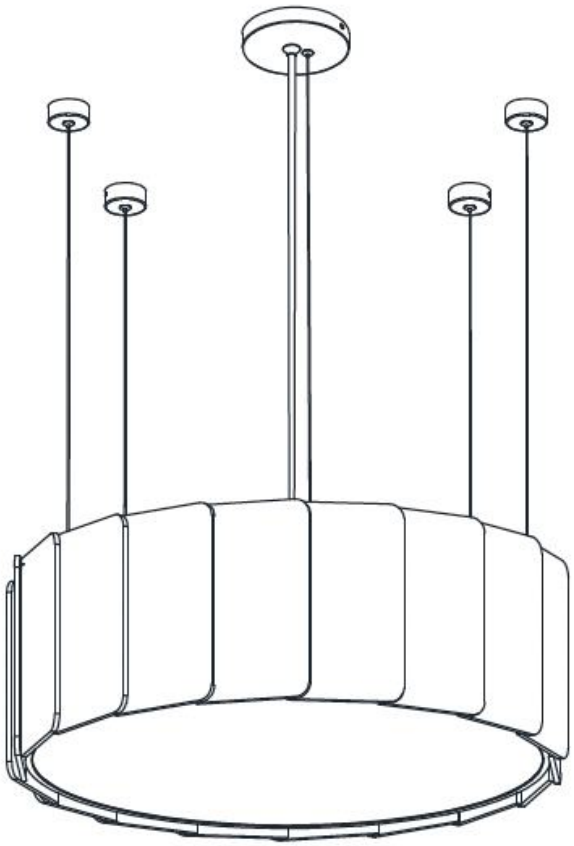

Circuit Box

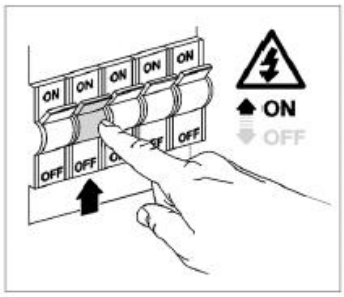

sales@gordonbullard.com
www.byiba.com
1 877-964-4646

991 South Gull Lake Dr.
Richland, MI 49083
USA

Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.

© Bullard & Comany 2026 All Rights Reserved

BYİBA
LIGHT

IMPORTANT

To ensure equipment safety you must carefully follow the instructions below. This leaflet must be kept handy by personnel entrusted with all ordinary and extraordinary maintenance.

- Before any installation or maintenance operation on the bulb, make sure it is disconnected from power
- Fit the correct bulbs, according to the type and power indicated on the lamp data label.
- Make sure the lamp technical features are compatible with the use you are going to make of it.
- Should you have any doubt, refer to the dealer or ask an electrician.
- When connecting to the mains, fallow the correct colour code far power cables: (N) blue, (L) brown or black and, only far class I equipment, (T)yellow/green.
- When lamps are to be fitted to the wall directly through their ceramic parts, fasten the fixing screws lightl, to avoid breaking the ceramic.
- To clean the lamp on the outside, use a soft cloth, possibly wet. Do not use solvents or abrasive products. No liquid must get in contact with the lamp interior parts.
- Do not touch the equipment with dirty hands.



= Class I equipment, must be connected to an earth terminal.



= Double insulated lamp, does not need earthing.



= Electrical equipment in class III, electrical safety guaranteed by low voltage tension, does not require grounding



= Minimum distance to be observed from all lit up objects.



= Replace immediately the safety glass, if damaged, with the original part.



= The lamp uses low pressure bulbs, and needs no protection glass.



= The equipment at the end of its life must be collected separately from other waste.

sales@gordonbullard.com
www.byiba.com
1 877-964-4646

991 South Gull Lake Dr.
Richland, MI 49083
USA

Due to the dynamic nature of lighting products and the associated technologies, luminaire data on all specification sheets is subject to change at the discretion of Gordon Bullard LLC and associated companies.

© Bullard & Comany 2026 All Rights Reserved